

INSTALLATION INSTRUCTIONS

FUEL FILTER MOUNT

10-15 CAMARO


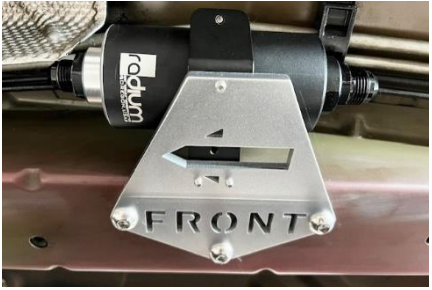



Document: 19-0341

Support: info@radiumauto.com

CAUTION
<p>Only a qualified technician following applicable safety procedures should perform the installation of this product. One must have knowledge in repair and modification of fuel systems and general vehicle modifications to install this product.</p> <p>Gasoline and other fuels are flammable and can be explosive.</p> <p>Only install in a well-ventilated location to minimize buildup of fuel vapors.</p> <p>No sparks, open flames, smoking or other ignition sources are to be present. Draining and removal of all fuel from the fuel system is recommended. Proper eye and personal protection is required at all times during installation.</p>
WARNING
<p>The fuel system is under pressure! Do not loosen any connections until relieving the fuel system pressure. Consult a service manual for instructions on relieving fuel pressure safely. This product is designed for off-highway and racing use only. Fuel system components may not be legal for sale or use on emissions controlled motor vehicles. Consult local, state, and federal laws.</p>

STEP	TOOLS NEEDED	INSTRUCTIONS	PHOTO
1	10mm Socket Wrench	<p>The terms "driver-side" and "passenger-side" will NOT be referenced. As depicted, these instructions will always reference "LH" and "RH" areas of the vehicle.</p> <p>Disconnect the negative terminal on the battery.</p>	<p style="text-align: center;">FRONT</p> <p style="text-align: center;">REAR</p>
2	Jack	Safely raise the vehicle.	
	Jack Stands		
3	Oil Lubrication	Be sure to lubricate the O-rings on the 10AN ORB fittings (not included) prior to installing.	
4	4mm Allen Wrench	<p>Place the large fuel filter clamp onto the mounting bracket. Be sure to flip and orient the mounting bracket as shown.</p> <p>Lineup the 3 holes and secure with the M5x0.8mm screws.</p>	

5	4mm Allen Wrench	Place the fuel filter into the large billet clamp. Center the filter within the clamp. NOTE: When installed, the "outlet" will be pointing towards the front of the vehicle.	
	Thread Locker		
6	6mm Allen Wrench	Lineup the 3 holes in the fuel filter bracket assembly to the 3 threaded holes on the RH frame rail. Be sure the bracket "arrow" is pointing towards the front of the vehicle.	
	Thread Locker		
7		After all other areas of the fuel system are addressed, reconnect the battery.	
		<p>Cycle the ignition switch to allow the pump to prime the fuel system. Check for leaks.</p> <p>Start the engine and check for leaks.</p> <p>INSTALLATION COMPLETE</p>	